



Biometric Enabled Deadbolt with Keypad

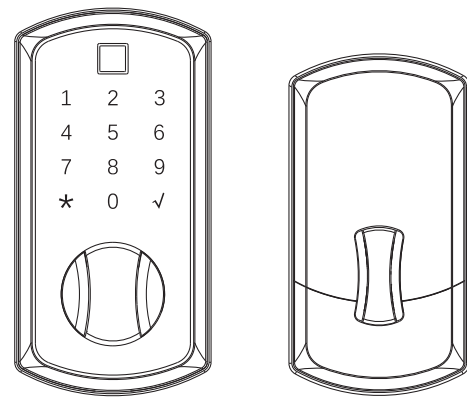

Package Includes:

- 1 - Exterior Faceplate
- 1 - Interior Faceplate
- 1 - User Guide
- 2 - Keys
- 1 - Strike Plate
- 1 - Mounting Plate
- 1 - Adjustable Latch
- 2 - 1 3/8" Screws
- 4 - 3/4" Screws
- 2 - Mounting Post


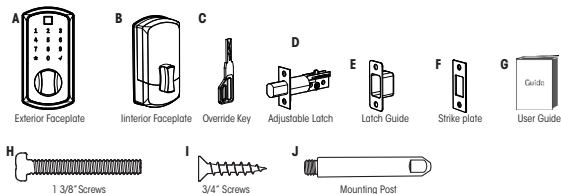


Please carefully check the above list to confirm all items have been received. If any items are missing, please contact Consumer Assistance. (See page for contact information)

Read this manual carefully before installing and operating!

Models 1744010, 1744011

1 Installation Overview

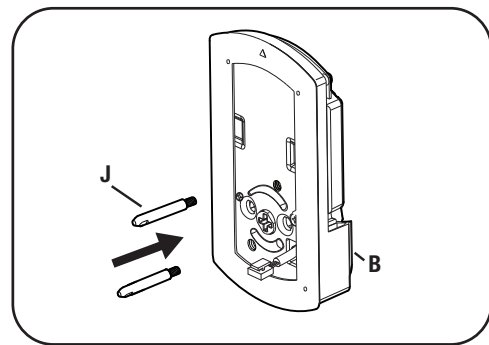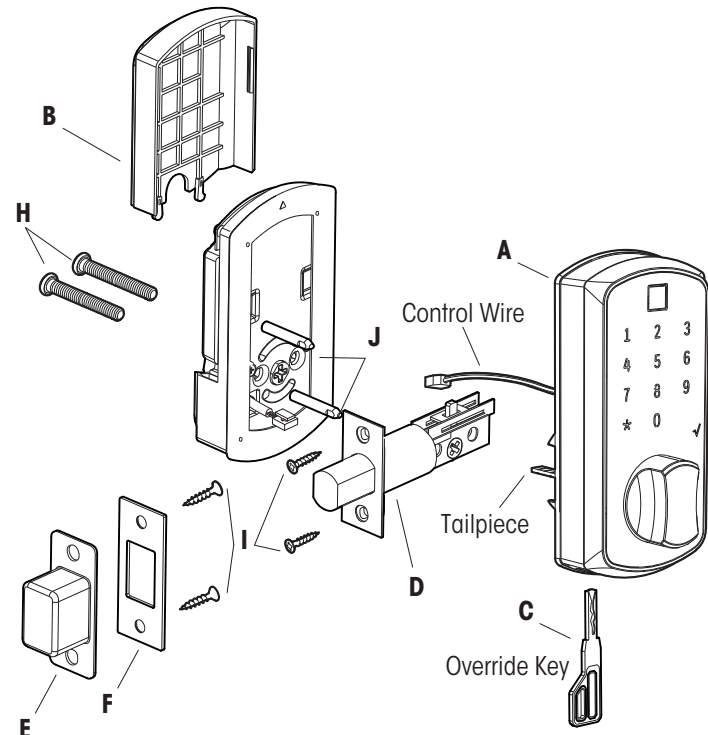


NOTE: Screw Mounting Post (J) into holes on Internal Assembly (B)

2 Preparing Door


! Refer to Template for Door Prep Instructions Included in packaging

NOTE: Skip this step if your door comes with pre-drilled holes.

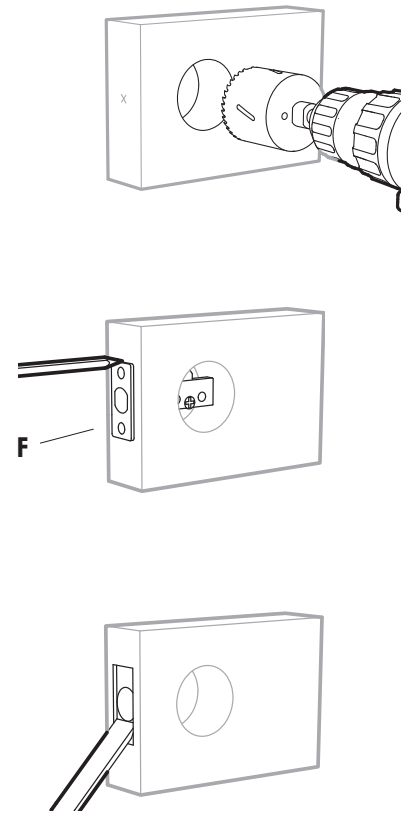


3 Install Enclosed Latch and Strike Plate

NOTE: Do not extend Cylindrical Cover past 2-3/4" (70mm)

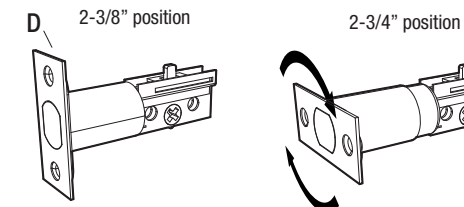


TO CONVERT FROM 2-3/8" (60mm) BACKSET TO 2-3/4" (70mm) BACKSET

1. Hold latch with "UP" facing forward and thumb pressing on the bolt.
2. Rotate the cylinder clockwise.
3. Twist the extension plate until it is all the way out.

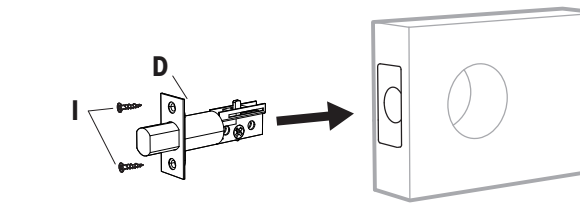


Strike Plate

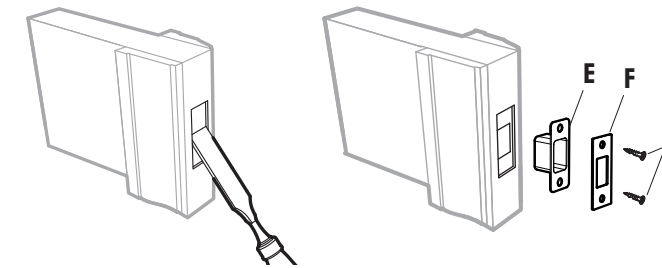


! Do Not Over Tighten

4 Install Exterior Assembly


! Make sure that the latch is EXTENDED. If it is retracted insert the screw driver and rotate towards the door edge.

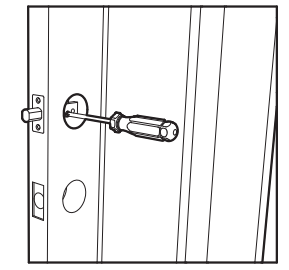

Insert the Exterior Assembly onto the door with the Tailpiece going through the Latch in the **HORIZONTAL POSITION**.

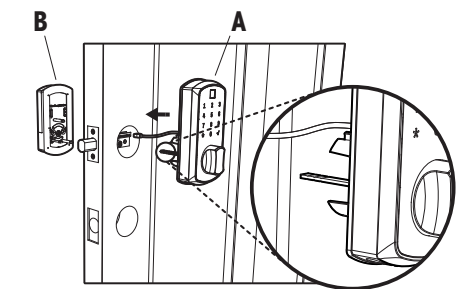

Carefully connect the control wires until they securely fit together.

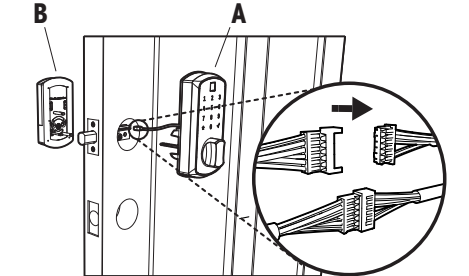


! It is helpful to have a person assist in the installation of the lock on the door.


5 Install Interior Assembly

! Work with the door open
Be careful not to pinch wire when installing
Make sure the thumb knob is in the vertical position.

Remove battery cover

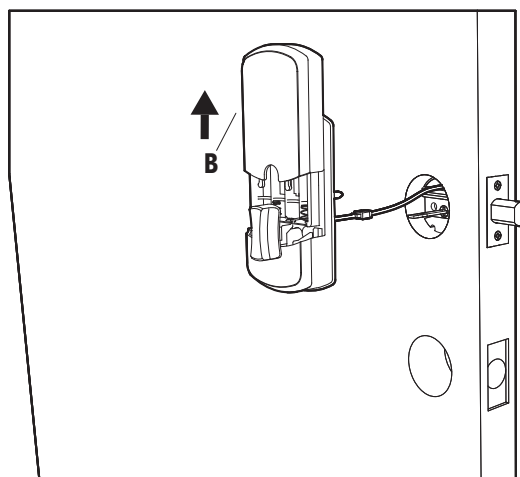


Secure with included 1 3/8" screws

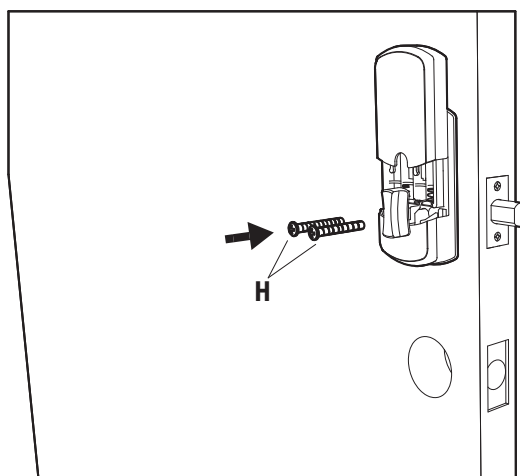

6 Test the Lock

Lock and unlock using the turn knob to make sure the latch is opening and closing easily. If not, go back to step 4 and ensure you followed the steps

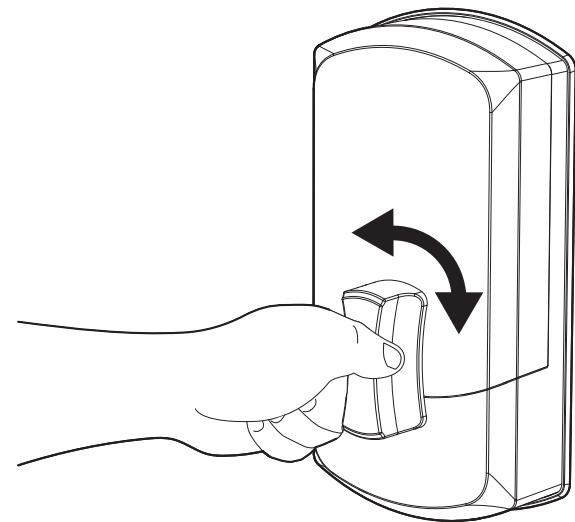


This Electronic lock requires (4) High Quality AA Alkaline batteries. When all 4 batteries are installed in the correct position, you should hear and short tone sequence and the keypad will illuminate blue.


NOTE: Do not touch the Keypad until the blue light turns off. Do not use rechargeable batteries or non-alkaline batteries.

7 Install Batteries

Insert 4 high quality alkaline AA batteries

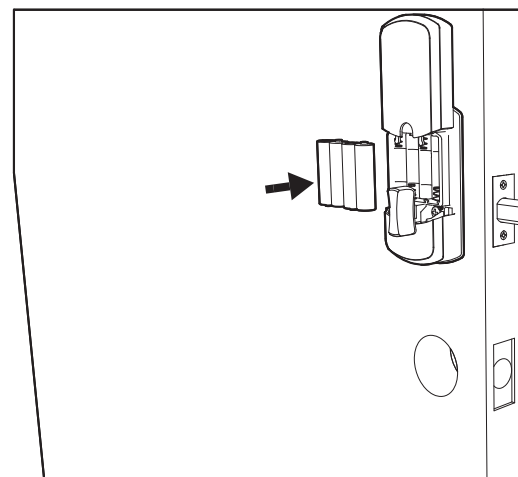


Replace battery cover

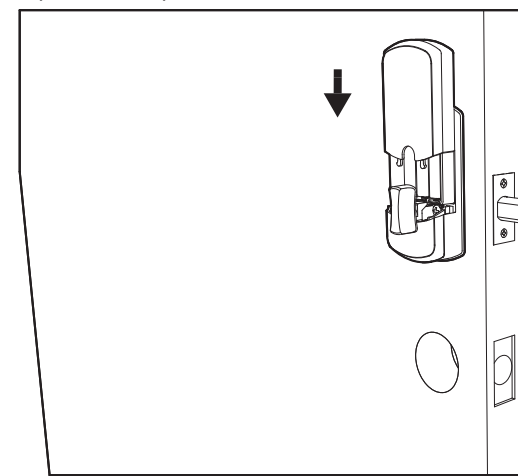

Override Key Access (Optional)

Insert override access key into slot on the bottom of the lock.
Turn key to engage clutch. Rotate Knob to unlock.

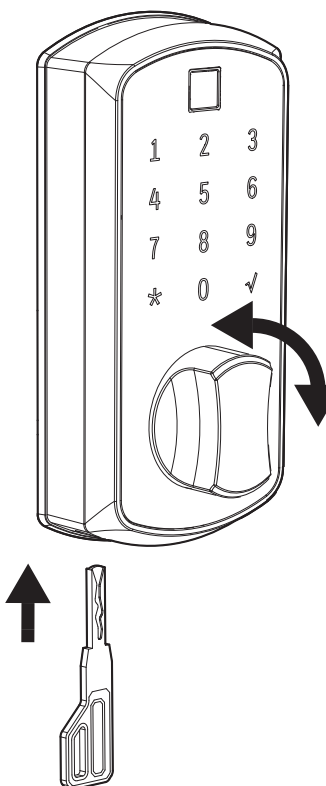

Congratulations, You have Installed the TruBolt Gemini Biometric Deadbolt (1744010, 1744011)
Turn Sheet over for Programing Instructions.


Limited 1-Year Electronic Warranty
This Tru-Bolt® product comes with a 1-Year Limited Warranty on Electronic Parts and a Limited Lifetime Mechanical and Finish Warranty against defects in materials and workmanship under normal use to the original residential user. Proof of purchase and ownership is required for the warranty to be in effect. This warranty is non transferable and applies to the original purchaser only, as long as the original purchaser occupies the residential premises upon which the product(s) was originally installed. This warranty DOES NOT COVER removal and reinstallation of product(s), scratches, abrasions, deterioration due to the use of paints, solvents or other chemicals, abuse, misuse, or product(s) used in commercial applications, does not cover any losses, injuries to persons/property or costs, and shipping and freight expenses required to return product(s). In no event shall Tru-Bolt® be liable for any special, incidental or consequential damages. If this product(s) is considered a consumer product, please be advised that some local and state laws do not allow limitations on incidental or consequential damages or how long an implied warranty lasts, so that the above limitations may not fully apply. Refer to your local laws for your specific rights under this warranty. If there are any problems please call our customer service with any questions or concerns.

DO NOT RETURN TO STORE!

If any parts are missing or damaged, please call Customer Service Toll free at 1-800-860-1677 x 1801 (M-F 7am-5pm PST).

Online installation videos can be viewed at TruBoltLocks.info. Don't forget to register your lock at TruBoltLocks.info for updates.

1 In order to program the lock, you must create a new administrator code

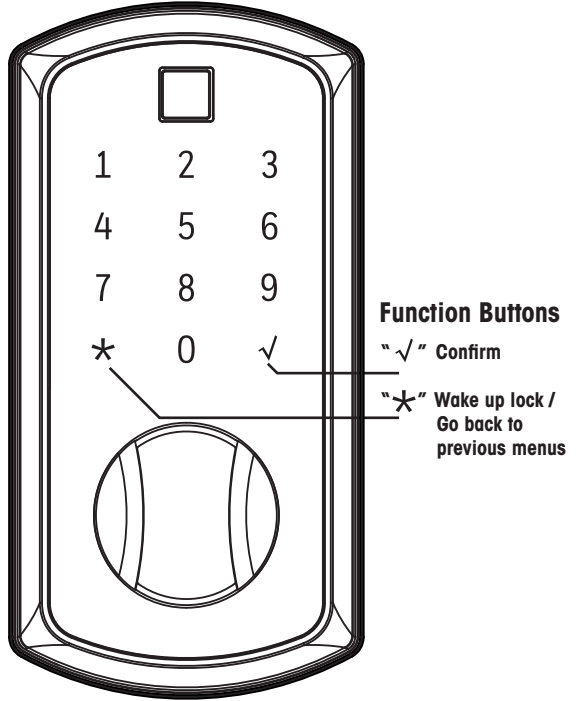




It is best to write down your new administrator code prior to step 2. Code cannot be less than 6 digits:



! Complete all the programming steps in the programming mode within 10 seconds. Do not press keypad until keypad stops illuminating.




To wake-up lock for Programming:
 1. Swipe your fingers across the face to activate lock
 2. Press the Illuminated Security Numbers
 Proceed to Step 2

2 Creating A New Administrator Code

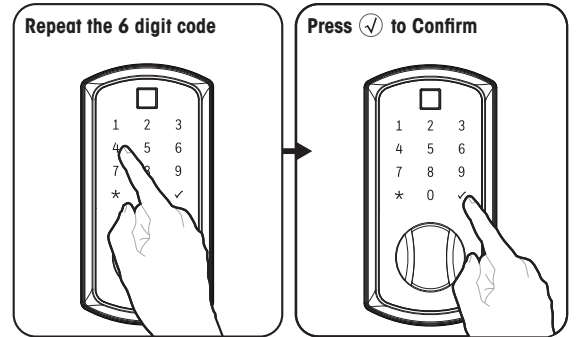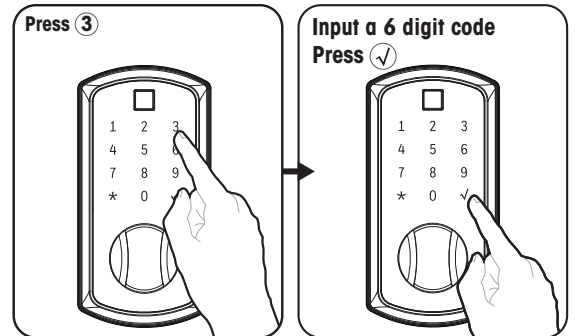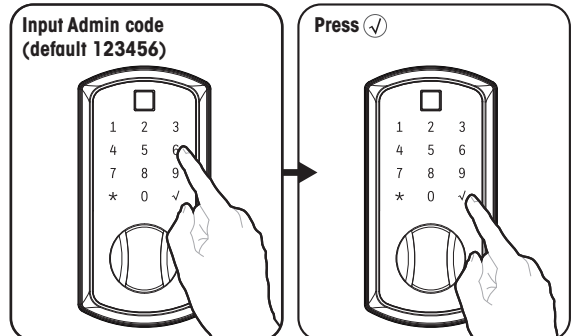

! NOTE: Admin Code must be 6 digits and can only be used to access the settings, it cannot be used to unlock.

3a Set Up User Codes

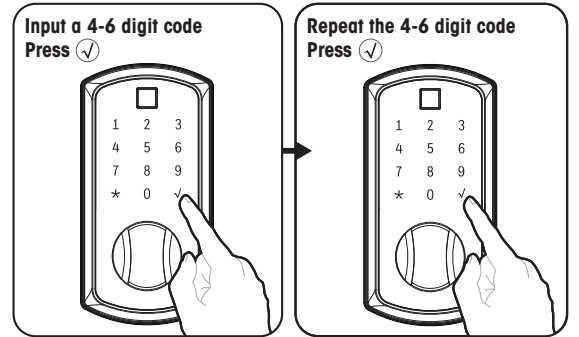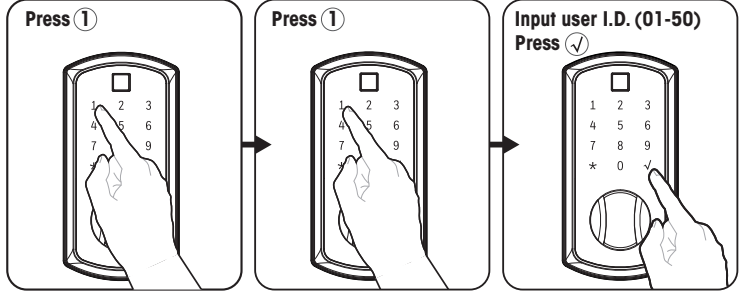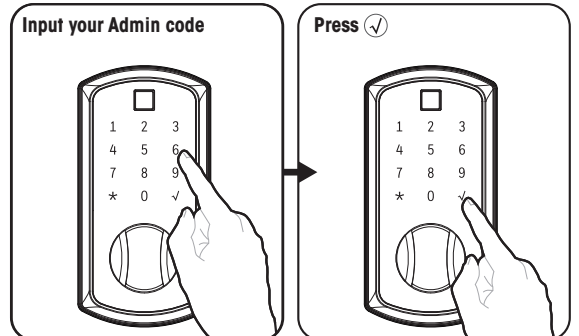

! NOTE: Set yourself up as user code 01. Follow prompts to select your passcode. Follow prompts to add additional user codes.

3b Passcode Programming Functions

User Code Management

To add or remove User Codes
 1. Input Administrator code
 2. Press ~✓~ to confirm
 3. Press ~1~
 4. Select from the list below

Manage User Passcode
 ~1~ Add user code
 ~2~ Delete user code
 ~3~ Delete all users codes

~1~ Add user codes
 1. Input the user ID (a two or three digit number from 01 to 50)
 2. Press ~✓~ to confirm
 3. Input the desired user code (4-6 digits)
 4. Press ~✓~ to confirm
 5. Repeat the user code
 6. Press ~✓~ to confirm
 When programming you will be prompted to add another passcode or press the ~*~ to return to the previous menu when finished

~2~ Delete user codes
 1. Input the user ID that you want to delete
 2. Press ~✓~ to confirm

~3~ Delete all user codes
 1. Voice prompt notification that this will delete all existing user codes
 2. Press ~✓~ to confirm




! NOTE: If the User ID, or code already exists there will be a related voice prompt. Each user needs their own code assigned.

User Records

User Passcodes must be 4-6 digit codes
 User 01 Passcode should be reserved for Owner

User Name/Code 01 - 50	
User / Code	User / Code
_____ / 01	_____ / 26
_____ / 02	_____ / 27
_____ / 03	_____ / 28
_____ / 04	_____ / 29
_____ / 05	_____ / 30
_____ / 06	_____ / 31
_____ / 07	_____ / 32
_____ / 08	_____ / 33
_____ / 09	_____ / 34
_____ / 10	_____ / 35
_____ / 11	_____ / 36
_____ / 12	_____ / 37
_____ / 13	_____ / 38
_____ / 14	_____ / 39
_____ / 15	_____ / 40
_____ / 16	_____ / 41
_____ / 17	_____ / 42
_____ / 18	_____ / 43
_____ / 19	_____ / 44
_____ / 20	_____ / 45
_____ / 21	_____ / 46
_____ / 22	_____ / 47
_____ / 23	_____ / 48
_____ / 24	_____ / 49
_____ / 25	_____ / 50

4a Set Up User Fingerprint

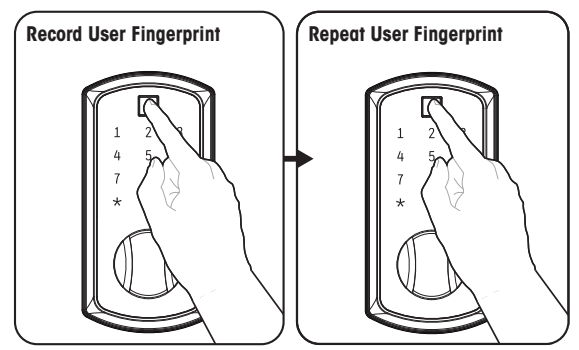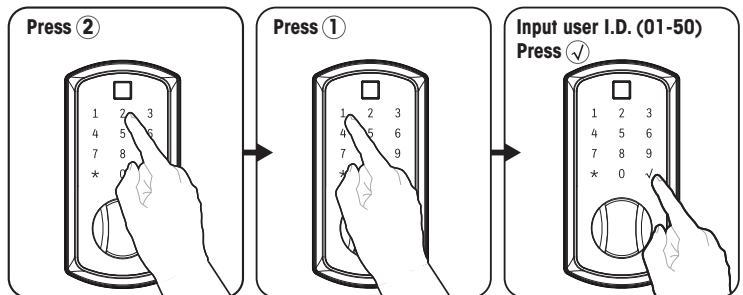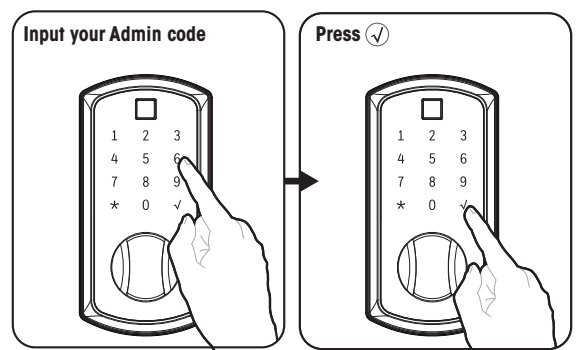

! NOTE: Set yourself up as user fingerprint 02. Follow prompts to add print to biometric reader.

4b Fingerprint Programming Functions

User Fingerprint Management

To add or remove User Fingerprints
 1. Input Administrator code
 2. Press ~✓~
 3. Press ~2~
 4. Select from list below

Manage User Fingerprint
 ~1~ Add user fingerprint
 ~2~ Delete user fingerprint
 ~3~ Delete all users fingerprints


~1~ Add user fingerprint
 1. Input the user ID (a two or three digit number from 01 to 50)
 2. Press ~✓~
 3. Record the user fingerprint
 4. Repeat the user fingerprint
 5. Repeat the user fingerprint
 6. Success
 When programming you will be prompted to add another fingerprint or press the ~*~ to return to the previous menu when finished

~2~ Delete user fingerprint
 1. Input the user ID that you want to delete
 2. Press ~✓~


~3~ Delete all user fingerprints
 1. Voice prompt notification that this will delete all existing fingerprints
 2. Press ~✓~ to confirm

! NOTE: User fingerprints must have individual user codes

5 Operating the Lock

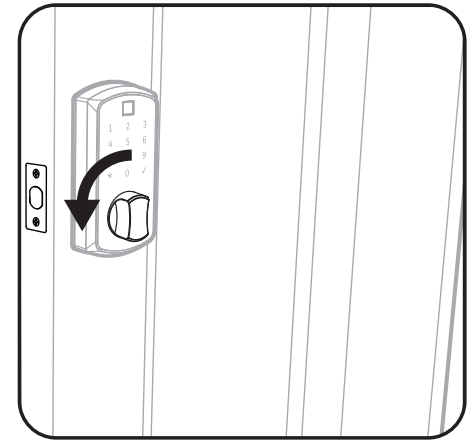

Locking
 The deadbolt can be locked at any time.
 Turn Thumb turn knob to lock the door

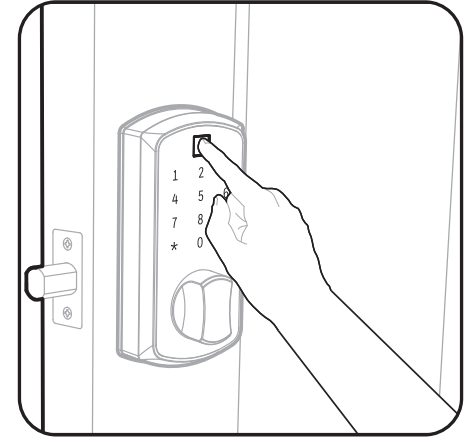

Unlocking
 User codes or Fingerprints can unlock the door
 1. Enter user code or fingerprint until you hear a beep
 2. Turn Thumb turn knob to open door

Additional Programming Functions

Voice Guide

1. On (Default setting)
 1. Input Administrator code
 2. Press ~4~
 3. Press ~1~
 2. Off
 1. Input Administrator code
 2. Press ~4~
 3. Press ~2~

Restore factory setting
 1. Press any key to wake up the touchpad
 2. Hold the "reset" button on the back panel (upper position of battery) for at least 5 seconds.

! NOTE: Make sure you hear "SUCCESS" to insure that the Reset occurs

Customer Service

Contact Us First! Do Not Return to Store

EMAIL: locks@lewishymaninc.com
 WEBSITE: www.trubollocks.info
 ADDRESS: Consumer Assistance Dept.
 Lewis Hyman, Inc.
 860 East Sandhill Avenue
 Carson, CA 90746 USA
 TELEPHONE: US/Canada 800-860-1677 Ext. 1801 (Toll Free)

Troubleshooting

Issue	Solution
Keypad will not function.	• Check that all batteries are fresh high quality Alkaline Batteries • Check for proper polarity (+ -) of all batteries • Check that the Control Wire is attached to the Interior Assembly
The Latch is sticking.	Installation screws of the lock may be too tight and have to be loosened • Remove Interior Assembly • Slightly loosen the Mounting Plate screws • Lock and unlock using the Key • Reattach Control Wire and Interior Assembly
Voice says "Ready to unlock" but thumb knob will not turn.	Lock not installed correctly • Ensure latch is kept horizontal when installing lock • Install lock with bolt extended
No space to store more users.	• Delete old user codes or fingerprints
Fingerprint is invalid.	• Make sure your fingers and the fingerprint reader are both clean • Keep your finger on the reader still until you hear the beep • Try using recording another fingerprint
Latch is not locking in inclement weather.	• Push or pull door to direct latch • Re-adjust latch for smoother operations
Admin Code Does not work.	• Press numbers slowly and carefully
Fingerprint Does not work.	• Hold fingerprint on reader pad longer
Locked out due to wrong code entry	• Wait 60 seconds and then try again
Lock is frozen and will not operate	• Remove one battery for 30 second to refresh lock
Batteries are dead	• Open the lock with Override Access Key and replace batteries

Don't forget to register your lock at Trubollocks.info for updates.
 1744010, 1744011 V1 E